
SuperDry XS™
BASEMENT AIR SYSTEM

How It Works:

1. **Air is filtered in three stages:**
   - A. Big particles
   - B. Tiny particles
   - C. Odors
2. Air is pre-cooled.
3. Air is cooled below its dewpoint, water condenses and falls out.
4. Cold air flows horizontally to cool heat exchange core and pre-cool next generation of air.
5. Air is reheated close to original temperature.
6. Dry air returns to space.
7. Water flows out by gravity.

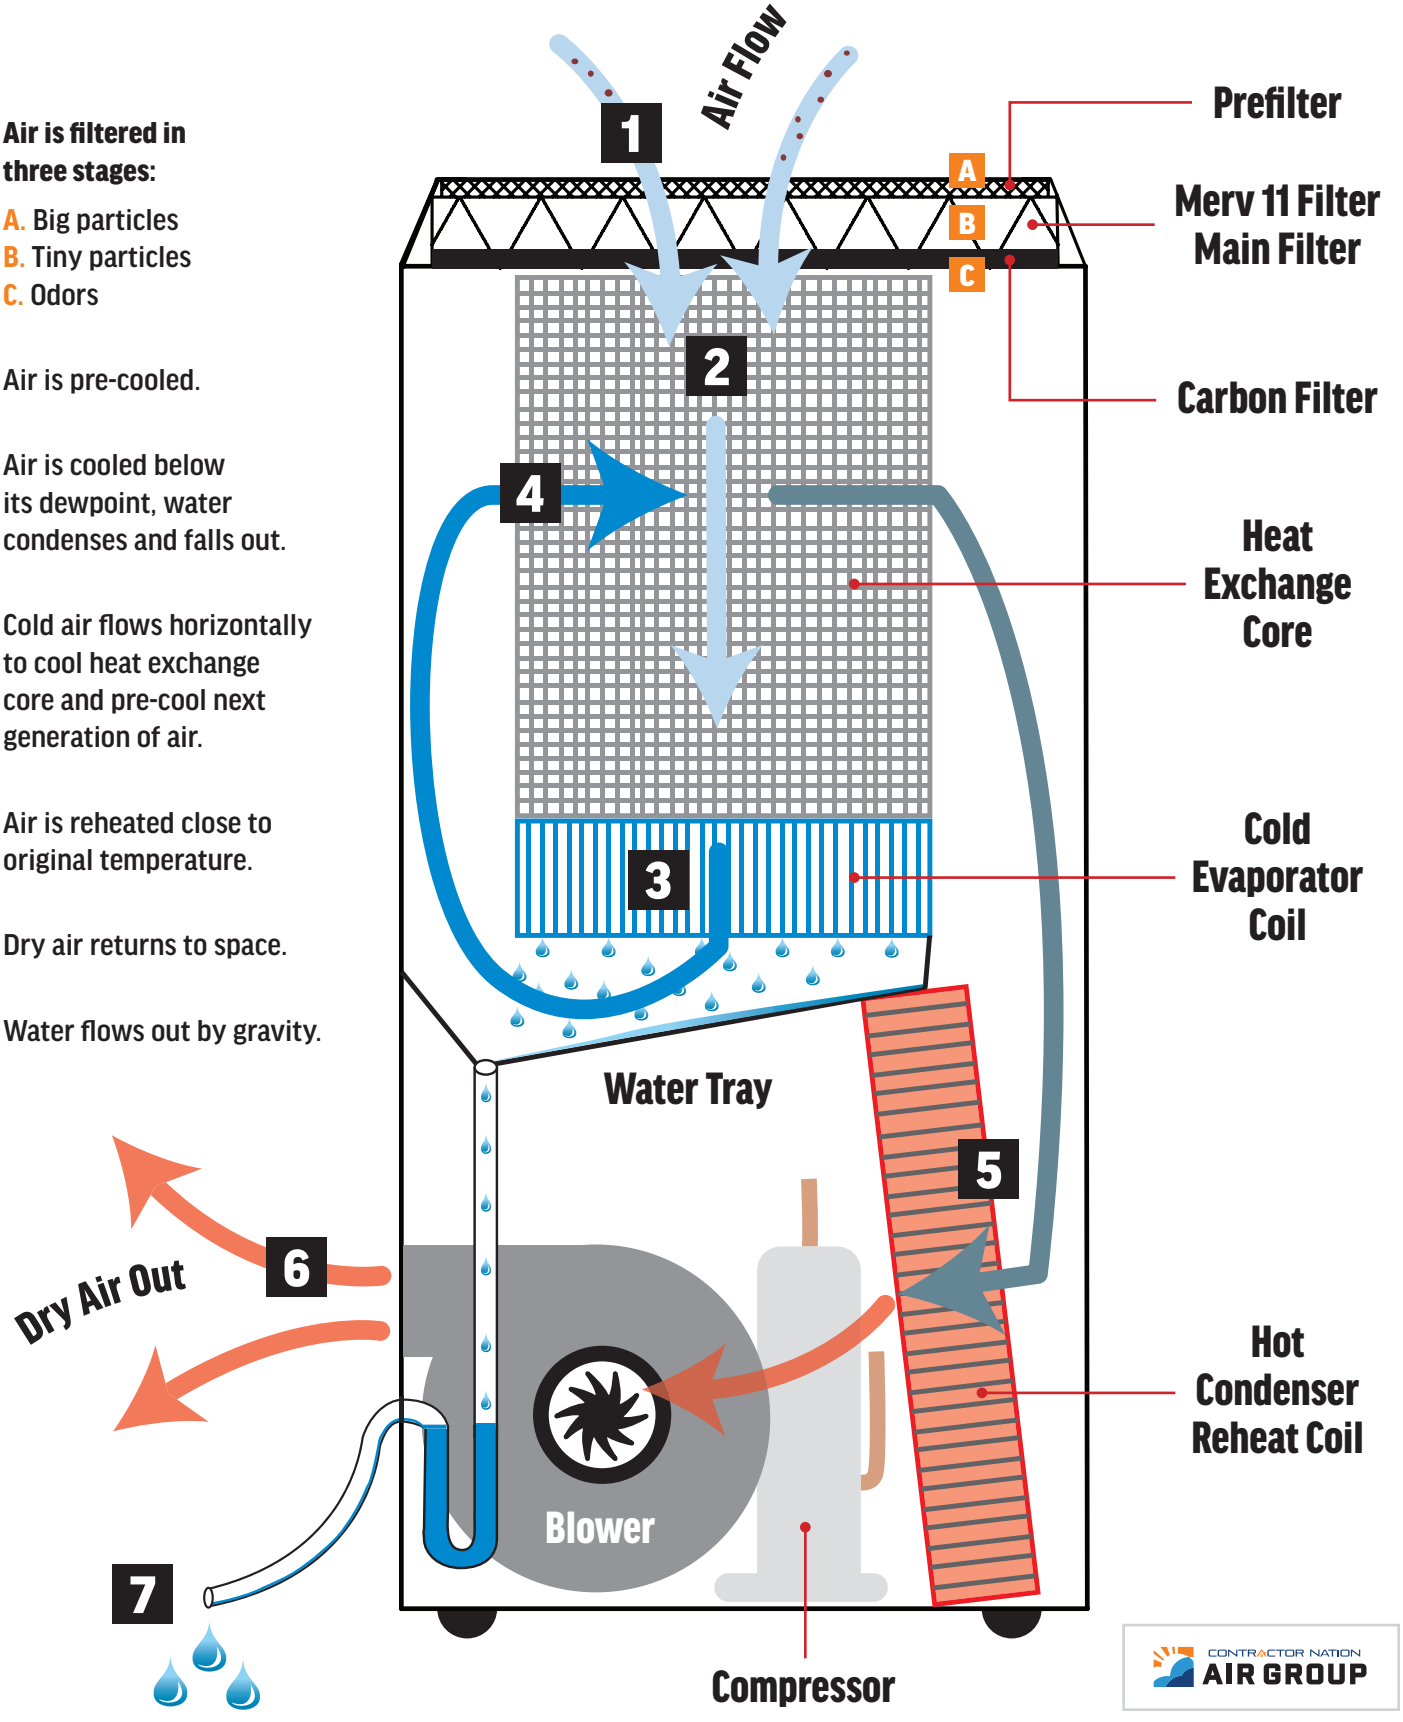

CONTRACTOR NATION AIR GROUP